

## **General installation instructions**

Please read the installation manual carefully before installing the system. Firstly, make sure you know what all of the system components are. During installation, especially when working on the roof, make sure you comply with the relevant occupational health and safety regulations and keep current rules in mind.

Installation should be carried out by skilled professionals. Should you have any questions about training sessions, please contact Renusol Europe.

Please also make sure you are using the latest version of the installation manual, available at [www.renusol.com](http://www.renusol.com). If required, you can find the instructions in other languages there. The images and texts in the installation manual relate to the latest technology at the time of printing. This manual is subject to printing mistakes and technical changes. The individual installation manuals are simply recommendations that are based on current technology and experiences of how Renusol Europe systems can be installed. If roof or property-specific characteristics need to be taken into account, please consult a specialist for assistance, for example a roofer or structural engineer.

## **General maintenance and assembly instructions**

There is a product warranty of 10 years, provided that the mounting system was installed in accordance with current installation instructions, that it took into account roof and property-specific characteristics and that it was properly installed. Please note the corresponding warranty conditions, which can be found in the download area at [www.renusol.com](http://www.renusol.com). We would be pleased to send you these conditions on request.

Technically correct maintenance, checkups and any other necessary maintenance and repair works of the mounting system comply with VdS 3145:2011-07.

This includes regular visual inspections as well as inspections based on events. We recommend carrying out an annual visual inspection as part of the regular checkup, during which the following should be kept in mind:

Check all installation components for damages that may be caused by climatic conditions, animals, dirt, deposits, adhesion, plant coverings, roof penetrations, seal strips, stability or corrosion. Screw joints should also be checked to make sure they are tight and, if required, retightened to correspond to the tightening torques in the installation manual.

The mounting system may be dismantled by following the steps in the installation manual in reverse order.